




Stem audio Stem Upgrader

1. Open the Windows App Store




Microsoft Store
App


2. Search for the Stem Upgrader app

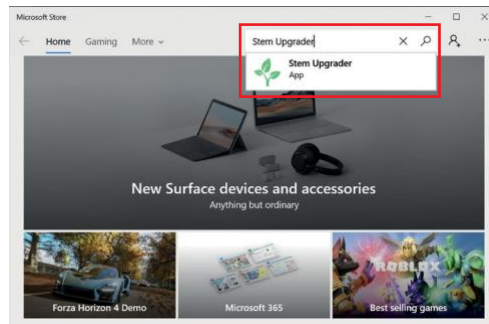

3. Download and install the Stem Upgrader app

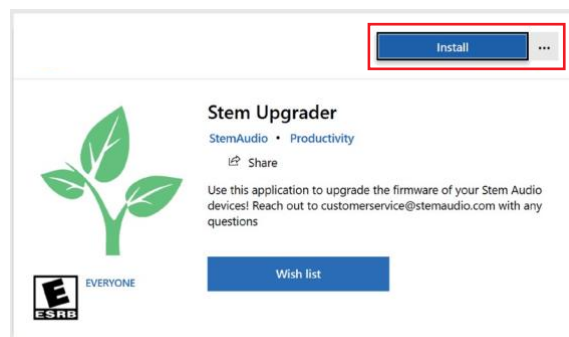

4. When the app has finished downloading, click the Windows start button and launch the Stem Upgrader app

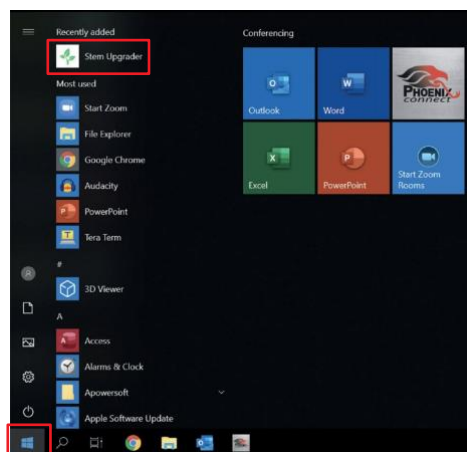

Note: Make sure the computer running the Stem Upgrader app is connected to the same network as your Stem Audio device(s)

5. As soon as you launch the Stem Upgrader app, the app will fetch the latest firmware files and Stem device(s) connected to the network



6. To update your device(s), click on the Upgrade Firmware button on the right of each listed device



7. Press the Upgrade Firmware for each one of your devices and wait until each device has fully rebooted



8. When your device(s) have rebooted, it is recommended to perform a second (*hard*) reboot. Once you have unplugged/plugged the ethernet cable from the back of your device(s), you will be ready to use the Stem Audio ecosystem!

Need Additional Help?

Email: customerservice@stemaudio.com Telephone:

(949) 877-STEM (7836)

Product User Manuals: stemaudio.com/manuals

Instructional Videos: stemaudio.com/videos